



Hello!

MODEL: LPB-EP50

WIRELESS POWER BANK

USER MANUAL

Please carefully read this Manual before using this Product for the very first time and well keep it for further reference.

Dear Customer

Thank you for choosing LinkTech's products, we appreciate your choice to purchase this product and we're hoping that you'll have a great time using our product.

Please share your experience with our products through LinkTech's customer services center either by phone, Whatsapp or Bip.

Feel free to express your opinions or tell us your suggestions on our channels. LinkTech will happily review all your invaluable feedback in order to improve our products and services.

If you encounter any problem or have difficulties with this product, please refer to the User's Manual, you can contact our customer services if you have any further questions.

LinkTech considers your priceless recognition and support as an encouragement to stay focused on providing high quality products and a motivation to move forward, improve our services and expand our workspace in the future.

LinkTech's Sales Team

WIRELESS POWER BANK



Product Characteristics and Features

- High Density 5000mAh Lithium-Polymer battery
- A robust outer shell made from fire-proof ABS and PC materials.
- Ultra light-weight, very compact and slim design, 16mm thickness
- Built-in USB Type-C input/output port with 20W maximum power rating.
- Up to 15W of super fast wireless charging through advanced coils that are placed on the front face of the powerbank
- Super magnets to hold the phone and stabilize it on the coils for optimal wireless charging performance
- A multi-coloured notification LED to indicate the powerbank's charging state
- Advanced circuit with multi-layer protection against common mechanic and electric factor

Model Number	EP50
Indicator	A Single multi-coloured LED
Battery Description	Lithium Polymer 5000mAh
Wireless Charging	5W / 7.5W / 10W / 15W
USB Type-C Input	5V – 3A / 9V – 2.23A / 12V – 1.67A (20W)
USB Type-C Output	5V – 3A / 9V – 2.23A / 12V – 1.67A (20W)
Total Charging Output	≤ 20 Watts

Product Introduction



Wireless Charge



USB-C Port

Usage Instructions

Charge Indicator:

- **Green Light:** The powerbank is recharging
- **Orange Light:** The powerbank is charging other devices.
- **Light is Off:** The powerbank is turned off

Recharging The Powerbank:

- Charge the powerbank to 100% when you use it for the first time.
- Connect the USB Type-C input port to any charging device in order to recharge the powerbank's battery, this port is compatible with many fast charging protocols, maximum input power is 20W.

Usage Instructions

Charging Phones and Other Devices:

- Place your phone on the powerbank's front side to initiate Wireless Charging operation, the embedded magnets will stabilize the phone and hold it in place for optimal charging experience.
- Use the built-in USB Type-C port to charge any phone or device, just attach it to any compatible cable and then connect the cable to your device, this port can provide up to 20W of charging power.

Attention

1. Please check carefully your device's supported input voltage and current before charging it, any incompatibility or improper use will reduce the battery life or even cause damages to either powerbank or connected device.
2. Please use a USB AC adapter or a Computer's USB port with 5V DC to recharge the powerbank.
3. Please make sure that your device is compatible with this powerbank's output voltage and current before attaching it to the powerbank.
4. When there is something wrong with the powerbank's temperature, colour or shape, stop using it immediately and contact local distributors.
5. Please make sure to fully recharge the powerbank at least once every three months.

Attention

- When using the powerbank it may become warm but not very hot.
- When charging your device with this powerbank, please make sure that your device is in charging state.
- Please make sure the powerbank is ON before attaching it to another device, similarly, after charging your device is finished, make sure the powerbank is OFF to avoid power loss.
- When recharging the powerbank, remove it first, then remove the adapter from AC outlet to save energy.
- Any inappropriate use may cause damages or reduce your powerbank's lifetime, the manufacturer is not responsible in the case of misusing or abusing the product.

FAQs

FAQ	Reasons
Powerbank cannot be recharged	<ol style="list-style-type: none">Using a defected, damaged or broken charging cableThe charging cable is not connected correctly or a little loose.AC adapter is broken, not working or there are no electricity at the AC outlet
Connected devices cannot be charged by this powerbank	<ol style="list-style-type: none">Using a defected, damaged or broken cableThe cable / connector is not attached correctly or a little loose.Low voltage, please recharge the powerbanksA problem with the powerbank, please contact local distributors

Warnings

1. Keep this product away from water and fire, and within -10°C to $+45^{\circ}\text{C}$ temperature range
2. This product contains electrical components, Do Not treat this product as a toy.
3. Do not disassemble, dismantle or change the structure of this product
4. Do not scratch the product's surface with a sharp object, do not shake it or throw it intentionally
5. Use a soft and dry cloth to clean this product, keep it away from chemical cleaning agents



Importo Firma
LINK-TECH TRADING COMPANY LIMITED
FLAT 609A, 6/F. FOOK CHONG BUILDING 63 HOL YUEN
ROAD, KWUN TONG, KOWLOON, HONG KONG
TEL: 3114 7567